



mysecurekid™
Protected if Connected

powered by  airtel

USER MANUAL



Model: MSK400T



ACCESSORIES

02

1 Watch, 1 Charger Cable, 1 User Manual, 1 Warranty Card



SPECIFICATIONS

Display	1.54 Inches Colorful touch IPS screen
Charging Volt	4.2V
Colors	Blue, Pink, Black
Dimensions	33 X 50 X 10 mm
Battery	600mAh Lithium ion polymer battery with standby time of 3 days
Speaker	8Ω/0.5W speaker
Positioning	GPS+LBS+AGPS
GSM,GPRS	850/900/1800/1900
SIM card Slot	Nano SIM
Working Temperature	0-40 Degree Celsius



KNOW YOUR WATCH

03



SPEAKERS

SIM SLOT

PEDOMETER &
WATCH REMOVAL SENSOR

MAGNETIC CHARGING PORT

MICROPHONE

GPS, BATTERY DISPLAY,
WATCH WEARABLE AND
OTHER INDICATORS

TIME, DATE & DAY

POWER BUTTON

EXIT SCREEN BUTTON

SOS EMERGENCY BUTTON





DOWNLOAD THE APPLICATION

04

Download and Install **'MySecureKid'** Android and iOS Mobile application on your phone by scanning the QR code given below or download the application directly from Google Play Store and App Store.





USER AND DEVICE REGISTRATION

05



01
STEP

Click on the MySecureKid application and register an account.

02
STEP

Choose unique USERNAME and PASSWORD to Register on application. Please ensure VALID and CORRECT email ID as it will be used for further notification and retrieving password.



User Registration



User Name

Password

Confirm password

Email



USER AND DEVICE REGISTRATION

06



03 STEP

 
Please register the Device on MySecureKid Application by scanning the QR code or entering the ID number given below the watch.

(Incase you have lost the code of the watch then contact customer care).

04 STEP

After successful login, the application shows a page to add the details of the user like height, weight etc.

(Note: In this page, a field says to “Enter the Number” - kindly enter the 10 Digit unique SIM number provided by your vendor).

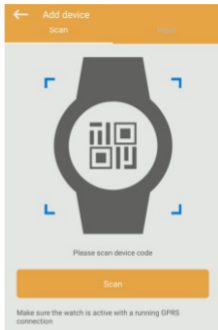

Name	Sex	Male	▼
Height	CM	Birthday	2018-02-28 ▼
Weight	KG	Grade	1
SIM card number of the watch			

☰ PRODUCT AND APPLICATION FEATURES - 07 -



TWO WAY **VOICE CALLING** LIMITED TO
3 NUMBERS REGISTERED BY THE APP



TWO WAY **VOICE MESSAGE (INTERCOM)**
LIMITED TO PARENT/SCHOOL APP



GET NOTIFICATION ON **ENTRY** AND **EXIT**
INTO **SAFE & DANGEROUS ZONES**



TRACK KID'S **HEALTH** AND **ACTIVITIES**
BY COUNTING **STEPS**



KNOW YOUR **CHILD'S REAL TIME LOCATION**
VIA GPS/LBS/AGPS POSITIONING

☰ PRODUCT AND APPLICATION FEATURES - 08 -



WATCH **BAND TAKING-OFF** AND
BATTERY LOW ALARM



WITH **SOS VOICE CALLING FEATURE**
BE WITH YOUR KID WHEN IN NEED



SET **DO NOT DISTURB**
TIME ZONES

 


TRACE THE FOOTPRINT
(TRAVEL HISTORY)



KNOW YOUR 'MySecureKid' APP

09

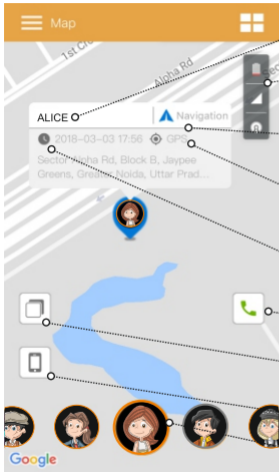

Name of the Child

{ Battery, GPS and GSM
Signal of Watch

{ Navigation to the
Projected Watch

{ Tells the Locating
Methods (GPS or LBS)

{ Date & Time of last
Location of Watch

Call the Device

{ Panorama and Satellite
Map Option

Location of Mobile

 
Registered Children List

* GPS (Satellite) location is more accurate than LBS (Network) location



KNOW YOUR 'MySecureKid' APP

10

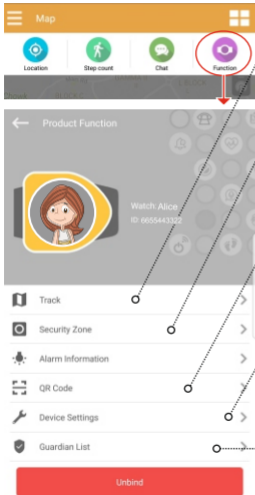

Can track the history of traveling of watch.

Can create the safe area for the device and a alarm message will be sent if the device enter/leave the safety zone.

This QR Code scanning let the other guardian also follow and track the same watch.

It includes Major settings like SOS numbers, Setting White lists, Setting up notifications, Shutting down device etc.






It provides list of all guardians who are following and tracking the projected same watch.



MAIN FUNCTIONS OF WATCH SETTING

11

Watch Setting

SOS Number	>	Can set three SOS numbers to be called in emergency.
Set Admin Number	>	To set authorised user to receive notifications via SMS.
Restart	>	Sends the command to restart the watch.
Resume factory setting	>	Resumes the factory settings of the watch.
Real-time position	>	It gives us real-time position the watch.
Remote Power Off	>	It Switches off the watch remotely.
Low Voltage Prompt		It enables/disables notifications of low battery of watch.
Anti Dropping		It enables/disables notifications of removal of watch.
Alarm Clock	>	It works as normal Alarm settings for watch.
GPS Working Mode	>	It sets the interval of sending location via GPS.
Pedometer		It enables/disables Pedometer to count the steps.
Set White List 1	>	It sets the list by which call can be made to the watch.
Set White List 2	>	Note: No other number can call the watch except these.
Call	>	It let watch calls the entered number.
SOS Prompt		It enables/disables the SOS notifications.
Set Language & time Zone	>	To set the language and Time Zone.
Reward	>	To send love to you child.
Upload Interval	>	It sets the time interval to upload the Data.
Setting Do not Disturb Period	>	To set the DND time intervals for the watch.
Watch Removal Prompt		It enables/disables notifications of removal of watch.
Set Phone Book	>	To save 10 contacts in the watch to make the calls.
Text Push	>	To send the Text message to the watch via App.



WARRANTY POLICY

12



Your MySecureKid watch carries a limited warranty of **Twelve (12) months** from the date of purchase against all manufacturing defects subject to the terms and conditions of the warranty policy.

During the warranty period electronic components are the only components covered under this warranty. These will be repaired or the watch will be replaced free of repair charges, if it proves to be defective in material or workmanship under normal use with the same model or an equivalent model of equal value based on the purchase price.

The warranty for the replacement and repair ends one year from the date the watch was purchased.



The warranty does not cover:

- Any defects in materials and workmanship of strap or case.
- Damage resulting from physical abuse, mishandling improper use, normal wear and tear due to lack of care, negligence, loss of components or damaged caused by loss of components, unauthorized repair, or other factors not due to defects in material or workmanship. In such cases warranty shall be considered as void.
- Water damages as **watches are not marked as waterproof.** (The watch contains a small water indicator which changes the color from white to Red upon getting in touch with water)
- loss of components or damage caused by loss of components.

Turn around time for service watches is up to 30 days from the date of receipt of the watch at the Company Service Centre, Greater Noida.



WARRANTY POLICY

14



To avail these benefits, all you need to do is to

- Approach our Authorized Service Center with the Warranty Card bearing the Barcoded Serial Number duly filled and stamped along with the Original Purchase Invoice of your watch.
- Talk to our Customer Care @ **844-844-866-4** or mail us at **support@mysecurekid.com** and once your product is inspected remotely and a defect is found due to manufacturer's workmanship send us the product via courier at

mysecurekid

4th Floor, Tower-IT/ITES, Stellar Business Park,
Plot No. TZ-03, Sector-Tech Zone,
Greater Noida-201308, G.B. Nagar U.P.